

 
Clikka Max Expandable Frame

Instructions

- 1 Locate each piece inside the canvas carry bag.



- 2 Remove each piece from the bag.

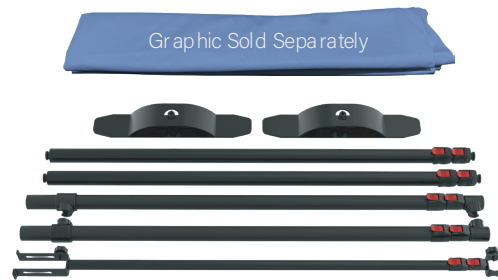


- 3 Insert the left and right Vertical Poles into the feet. They will automatically lock into place.




- 4 Adjust the Horizontal Pole length to fit the graphic width using the red levers and the length markings.



 - 5 Slide the Horizontal Poles into the graphics top and bottom pockets.

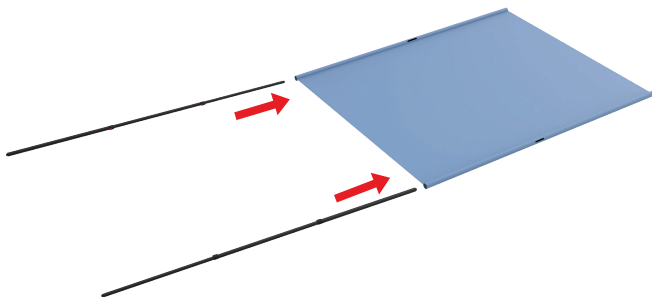

 - 6 Lock the Horizontal Poles onto the Vertical Poles.

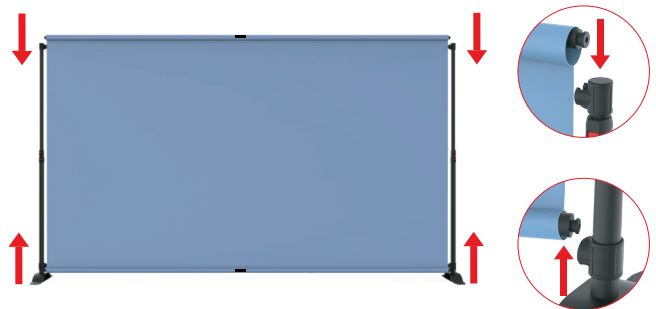

- 7 Adjust the height of the right and left Vertical Poles using the red levers.



Note: both sides must be adjusted at the same time.

- 8 Adjust the height of the middle support rod then tighten the upper and lower finger screws to complete assembly.

