

# Instructions

## Wall Mounted SEG Lightbox

1. Carefully open the box.
2. Remove the contents and lay out neatly.
3. The lightbox frame lengths are labelled with symbols on each end.
4. Join the frame together matching up the symbols.




5. Assemble flat rather than standing up.
6. The wiring is inside the frame so ensure the sections are inserted fully.
7. Install the “L” brackets onto the inside of the frame using the thumb screws provided. (See Below)
8. Position the frame on the wall where required and mark where holes are to be drilled into the wall.  
**Note the position of the power socket and on-off switch.**

9. Drill holes in the wall where you marked them and put plugs in the wall.
10. Use wood screws if fixing onto wood.  
Use the correct fixings for the application.
11. Install the back fabric by slotting the silicon edging into the outward facing slot.
12. Fit the corners first. Do not stretch the print or edging as you may gather the fabric unevenly.



13. Screw the lightbox onto the wall.  
The screws will go through the fabric.
14. Install the front fabric.
15. Run the cable and plug it in.

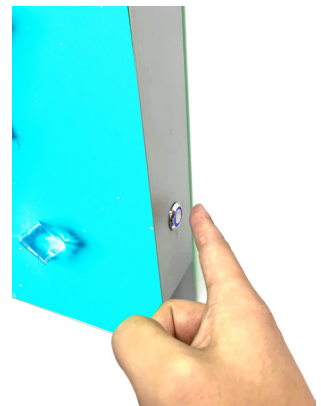

**16. Turn on and enjoy!**